




The RagBox® is designed to stop a wide range of items from entering a vacuum sanitary system.

- Significantly eases the process of removing foreign objects
- Easy access via the lid opening mechanism
- Made of recycled plastic material
- Offers a dosing unit connection
- Very low risk of spillage

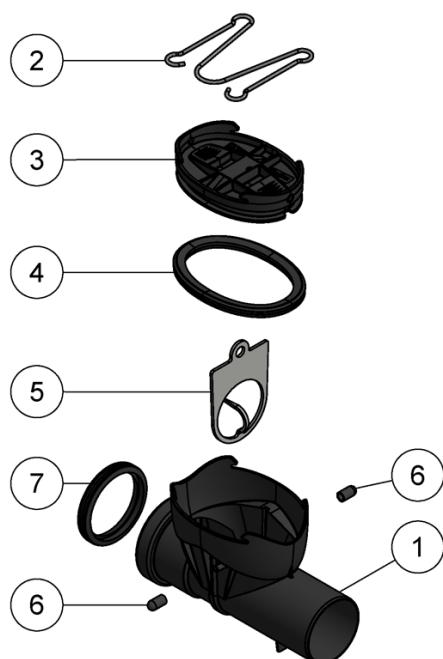

Technical Data

Outside Dimensions.....	160 x 79 x 100 mm (LxWxH)
Generic Material.....	PP
Connection.....	Ø 50 mm
Net Weight.....	0.18 kg

Disclaimer

Note: Our products and services are offered and sold subject to Jets Vacuum AS' General Sales Conditions, copies of which will be furnished upon request. Information provided herein is solely for information purposes, does not constitute any warranty or representation of any kind and is subject to change without notice. We strive to reproduce product colors reasonably accurate. Without prior written approval, this document or any part of may not be reproduced in any form. Jets®, Vacuumarator®, RagBox®, Helivac™, VC™, VOD™, CVS™ and Softsound™ are trademarks and/or registered trademarks of Jets. © Jets AS. All rights reserved.

Components

1 Housing	034102911
2 Spring	034102914*
3 Cover	034102912*
4 Sealing Ring	034102915*
5 Hook	034102913*
6 Cap	037506442*
7 Pipe Seal, ø50mm	034512578*


* Component/s available as replacement parts.

Appendix: Dosing Unit Connection

Two dosing unit connections are available on the RagBox® and either one can be used to connect the dosing unit hose.


1.

Remove the cap from one of the hose connections (one available on each side) and drill a Ø3mm hole through the connection into the housing.

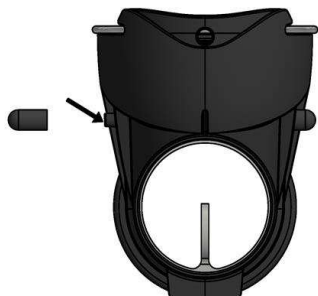

2.

Connect the hose from the dosing unit to the hose connection.

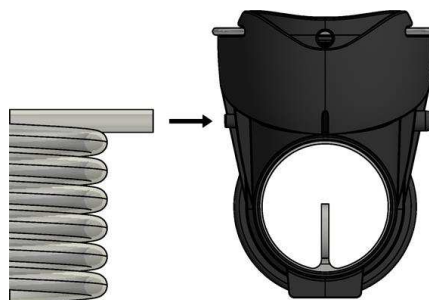

3.

Secure the hose with a cable tie.

